



For tech support call 1-888-660-5892
Info@truxxx.com

SAFETY WARNING!

Always use the correct tools, and wear safety goggles and gloves. Always use jack stands or a locking lift. We recommend professional installation by a licensed mechanic.

VEHICLE RIDE WARNING!


Trucks with lift kits or leveling kits installed have a higher center of gravity. Aggressive direction changes may cause a tip over. Always drive carefully and obey the speed limit.

702070—Nissan Bump Stop Kit

1. Replace the lower control arm bump stop with large cone-shaped bump stop included in the kit.
2. Assemble the round/flat bump stop with the bracket supplied in the kit

3. Remove the forward strut mount nut (see arrow in photo). It is not necessary to remove any others.

4. Install the bracket by mounting it on the strut mount stud and the open hole in the frame of the truck with the supplied bolts. Some trucks have different size holes and a washer may be required.

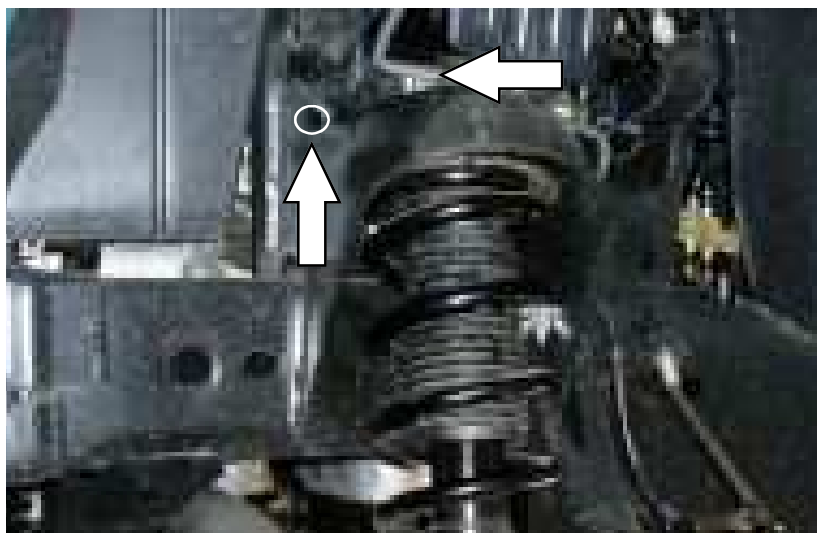

The bump stop must face up

5. Reattach the strut mount nut and tighten all fasteners. At full droop the upper control arm should be sitting on the newly installed upper control arm bump stop.